

19.1 - WIRING DIAGRAM

Legend:

AC	Accelerator
BAT	Batteries
BC	Battery charger
BE	Flashing light (optional)
BRK	Electromagnetic brake
C1	Battery connector
EB1	Functions table
EB2	Display
EB3	Command panel
EV	Solenoid valve
F1	Battery charger fuse (1A)
F2	Illumination fuse (if present) (3A)
F3	Horn fuse (1A)
F4	Flashing light fuse (if present) (1A)
F5	Solenoid valve fuse (5A)
F6	Brush deck actuator fuse (10A)
F7	Squeegee actuator fuse (10A)
F8	Electric brake fuse (7.5A)
F9	Water pump fuse (5A)
F10	Chemicals pump fuse (if present) (5A)
F11	Suction motor fuse (40A)
F12	Right brush motor fuse (40A)
F13	Left brush motor fuse (40A)
F14	Traction motor fuse (100A)
HN	Horn
KEY	Start key
L1	Work light (optional)
MA	Suction motor
MAS	Brush deck actuator motor
MAT	Squeegee actuator motor
MS-DX	Right brush motor
MS-SX	Left brush motor
MT	Traction motor
PA	Water pump
PC	Chemicals pump
PE	Emergency button
S1	Recovery water level sensor
SW1	Seat microswitch
TE	External remote switch

Colour codes:

BK	Black
BU	Blue
BN	Brown
GN	Green
GY	Grey
OG	Orange
PK	Pink
RD	Red
VT	Violet
WT	White
YE	Yellow

